

Electrofusion Welding Machine Configuration Table and Quotation List

Item	Model	Welding Range	Configuration 1	Configuration 2	Configuration 3	Configuration 4
Electrofusion Welding Machine	DPS20-2.2KW	20-200MM	1.E/F Machine 2.Connector Wire 3.Scraper 4.Connector 4.0 &.7mm 5.Scanner 6.Printer 7.Manual Operate 8.Alumium Alloy Box	1.E/F Machine 2.Connector Wire 3.Scraper 4.Connector 4.0 &.7mm 5.Scanner 6.Printer 7.Manual Operate	1.E/F Machine 2.Connector Wire 3.Scraper 4.Connector 4.0 &.7mm 5.Scanner 6.Manual Operate	1.E/F Machine 2.Connector Wire 3.Scraper 4.Connector 4.0 &.7mm 5.Manual Operate
	G.W:		14Kgs	12Kg	11Kg	11Kg
Item	Model	Welding Range	Configuration 1	Configuration 2	Configuration 3	Configuration 4
Electrofusion Welding Machine	DPS20-3.5KW	20-315MM	1.E/F Machine 2.Connector Wire 3.Scraper 4.Connector 4.0 &.7mm 5.Scanner 6.Printer 7.Manual Operate 8.Alumium Alloy Box	1.E/F Machine 2.Connector Wire 3.Scraper 4.Connector 4.0 &.7mm 5.Scanner 6.Printer 7.Manual Operate	1.E/F Machine 2.Connector Wire 3.Scraper 4.Connector 4.0 &.7mm 5.Scanner 6.Manual Operate	1.E/F Machine 2.Connector Wire 3.Scraper 4.Connector 4.0 &.7mm 5.Manual Operate
	G.W:		14Kgs	12Kg	11Kg	11Kg

Measure: Machine size:352*188*341mm Package Size:460*270*380mm

